With your PT-H100, you can create labels for multiple applications. Select from the many frames, character sizes and styles to design beautiful custom labels. In addition, the variety of tape cassette available allows you to print labels with differen widths and exciting colors.

Read this manual carefully before you begin and keep the manual in a handy place for future reference.

Printed in Philippines



## **Safety Precautions**

Indicates a potentially hazardou **AWARNING** indicates a potentially hazarded situation which, if not avoided

Follow these guidelines to avoid the risk of fire, burns, injury rupture, overheating, abnormal odor or smoke.

- Do not use the P-touch labeler in places of high humidity such as bathrooms.
  Do not allow the P-touch labeler/batteries to get wet, for example, by handling them with wet hands or spilling beverages on to them.
  Since loss of eyesight may result when leaked fluid from batteries gets into your eyes, immediately rinse your eyes with a large amount of clean water, and then seek

- minificularly in last your eyes with a large amount of clean water, and trief seek medical attention.

  Do not disassemble or modify the P-touch labeler/batteries.

  Do not allow a metal object to contact both the plus and minus ends of a battery.

  Do not ture a metal objects, such as tweezers or a metallic pen, to change the batteries.

  Do not throw the batteries into fire or expose to heat.

  Remove batteries immediately and stop using the P-touch labeler if you notice abnormal odor, heat, discoloration, deformation or anything unusual while using or storing it.
- storing it.

  Do not use a damaged or leaking battery as the fluid may get on your hands. Do not use a deformed or leaking battery or one whose label is damaged. There is a
  possibility of generating heat.

# Before using Ni-MH rechargeable batteries, carefully read the instructions for the batteries and battery charger, and be sure to use them correctly. When using Ni-MH rechargeable batteries, charge the batteries with a specialized battery charger before using the batteries. **General Precautions**

Depending on the location, material, and environmental conditions, the label may unpeel or become irremovable, the color of the label may change or be transferred to other objects. Before applying the label, check the environmental conditions and the material.

When the P-touch labeler is not being used, store it out of the reach of children. In addition, do not allow children to put the P-touch labeler parts or labels in their mouths. If any object has been swallowed, seek medical attention.

Do not touch metal parts around the print head immediately after printing.

Do not touch the cutter blade.

If leaked fluid from batteries gets on your skin or clothes, immediately rinse them with clean water.

Remove the batteries if you do not intend to use the P-touch labeler.

Do not use a battery other than that specified. Do not use combinations of old and new batteries or combinations of different types, different charging levels, different manufacturers or different models. Do not insert a battery with its plus and minus and reversed.

Do not press on the LCD display.

Do not put your finger inside the P-touch labeler when you close the cassette of Before using Ni-MH rechargeable batteries, carefully read the instructions for the control of the con

- The internation of the policy of the policy
- have the TEg mark.

leakage, burns or heat.

ends reversed. Do not drop or hit the P-touch labeler.

- Only use a soft, dry cloth to clean the labeler; never use alcohol or other organic solvents.
  Use a soft wipe to clean the print head; never touch the print head.

- Do not put any foreign objects into the tape exit slot or battery compartment, etc.
   Do not place the P-touch labeler/batteries in direct sunlipt or rain, near heaters or other hot appliances, in any location exposed to extremely high or low temperature Indicates a potentially hazardous **▲**CAUTION situation which, if not avoided. (e.g., on the dashboard or in the back of your car) or high humidity, or in dusty
- Do not apply excessive pressure to the cutter lever. Follow these guidelines to avoid personal injury, liquid
  - Do not try to print if the cassette is empty; it will damage the print head.
     Do not pull the tape while printing or feeding; it will damage the tape and the P-touch
  - Any data stored in memory will be lost due to failure or repair of the P-touch labele
  - The P-touch labeler is not equipped with a charging feature for rechargeable
  - batteries.

    The length of the printed label may differ from the displayed label length.

    A protective clear plastic sticker is placed over the display during manufacturing and shipping. This sticker should be removed prior to use.

    When power is disconnected for more than three minutes, all text, format settings and control the stored in the memory will be cleared. any text files stored in the memory will be cleared.

### FCC NOTICE


This device complies with Part 15 of the FCC Rules. Operation is subject to nterference, and (2) this device must accept any interference received,

- including interference that may cause undesired operation.

  This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are
- buyuan device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- of the following measures:
- Reorient or relocate the receiving antenna.
  Increase the separation between the equipment and receiver.
  Consult the dealer or an experienced radio/TV technician for help.
- important

  Changes or modifications not expressly approved by Brother Industries, Ltd. could void the user's authority to operate the equipment.

## **Power Supply and Tape Cassette**

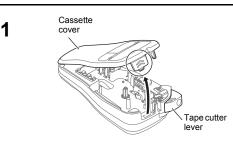

above indicated area at the top end of the If a tape cassette is already installed, remove it by

Open the cassette cover by pressing the

- pulling it straight up. Also, if batteries are already installed, remove them • Make sure that the power is turned off when
- replacing batteries or tape cassettes

Insert six new AAA alkaline batteries (LR03) or fully charged Ni-MH batteries (HR03), making sure that their poles point in the correct directions. Users of alkaline batteries: Always replace all six batteries at the same time with brand new ones. **Users of Ni-MH batteries:** Always replace all six batteries at the same time with fully charged ones.

Visit us at <a href="http://support.brother.com/">http://support.brother.com/</a> for the latest

14. Style key

Character keys

16. Caps key

17. Symbol key

18. Menu key

19. Clear key

20. Print key

21. Enter key

23. Frame key

24. Accent key

22. Auto Designs key


# Cutter's End of tape edge

Insert a tape cassette, making sure that it snaps into place.

- · Make sure that the end of the tape feeds under the tape guides.
- Use only Brother TZe tapes with this machine.

Securely close the cassette cover, making sure that it snaps into place

## LCD Display & Keyboard

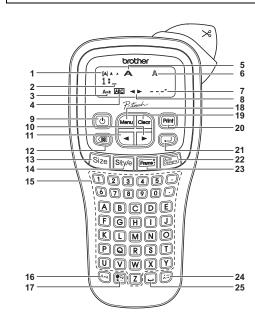

Cursor

Caps 4. Underline/Frame

Width Style Label Length If a specific label length h

selected, also appears
8. Guidance (left, right) Power key 10. Cursor key: Right 11. Cursor key: Left

NOTE

12. Backspace key

• The LCD shows one row of 12 characters; however, the text that you enter can be up to 80 characters in length.

Label length shown on LCD may slightly differ from the actual

While selecting the settings, press the Space key to go back to the default item. The print preview is a generated image of the label, and may differ from the actual label when printed.

### **Specifications**

Approx. 4.4" × 8.2" × 2.4"  $(W \times D \times H)$  $(Approx.110(W) \times 208(D) \times 59(H)mm)$ Approx. 0.9 lb. (Approx. 390 g) Weight: (without batteries and tape cassette)

Power supply: Six AAA alkaline batteries (LR03) Six AAA Ni-MH batteries (HR03) Brother TZe tape (width)

Tape cassette:

0.13" (3.5mm), 0.23" (6mm), 0.35" (9mm), 0.47" (12mm) \*1 Visit us at <a href="http://support.brother.com/">http://support.brother.com/</a> for the latest information about the recommended batteries

Should you encounter any problems with your product, please do not return your product to the store! After referring to the User's guide, if you still need assistance, call Brother Customer Service at: Voice: 1-877-BROTHER

-877-BROTHER or visit us at www.brother-usa.com

Web: www.brother-usa.com Fax: 1-901-379-1210 f you need to locate a service center, please call

## **Initial Settings**

1 Start your machine.

Supply power by using six AAA batteries, and then press ( ).

2 Set the language.

Menu → ◀ / ▶ [Language] ← → ◀ / ▶ [English/Español/Français/Hrvatski/Italiano/Magyal Nederlands/Norsk/Polski/Português/Portug. (BR)/ Română/Slovenski/Slovenský/Suomi/Svenska/Türkce/ Čeština/Dansk/Deutsch]

3 Set the unit of measurement. The default setting is [inch].

> Menu → ◄ / ► [Unit] ← → 
> / ▶ [inch/mm] 
> ...

NOTE

The machine automatically turns off if no keys are pressed within five minutes.

To cancel any operation, press (BS)

### **Troubleshooting**

► Error message		
Message	Cause/Remedy	
Low Battery!	The batteries are weak. If using AAA alkaline batteries: Replace them with new ones. If using Ni-MH batteries: Charge them fully.	
Battery Dead	The installed batteries are running low.	
Invalid!	An invalid number was entered as the label length. (This is not displayed in Auto Designs function.)	
	You tried to print a text file when there is no data stored in the memory.	
	Print is pressed when no text is entered.	
No Text!	You tried to select Text Preview or Cable Label when no text is entered.	
	• was pressed when no text was entered while using the DECO MODE or Auto Designs function.	
Line Limit!	• You tried to enter a 3rd line by pressing .  • You tried to print or preview two lines of text while 0.13" (3.5mm) or 0.23" (6 mm) tape is installed. Instape of a larger size.	
No Cassette!	You tried to print a label when there is no cassette installed.	
Cutter Error	The tape cutter lever was used during the printing process.	

## Cause/Remedy The maximum number of characters (80 characters\* have already been entered. \*50 characters - for Auto Designs function and DECO Text Full! Text Limit! No Frame OK? Feeding tape after printing when [Chain Print] is selected. Refer to "Setting Margin". OK to Feed? Only 0.47"(12mm) tapes are available for use with Insert 0 47" Wrong Tape! Use a tape cassette with the 129 mark

th the DECO MODE function: nee the number of entered characters exceeds the lel length, reduce the text. other functions: noe the number of entered characters exceeds the lel length, reduce the text, or select [Auto] as the lel length.	
nting on 0.13" (3.5mm) tape with invalid Frame tting ON. (Select  to print with no Frame,	

### Mhat to do ...

► What to do when		
Problem	Solution	
The display stays blank after you have turned on the machine.	Check that the batteries are correctly inserted.     If the batteries are weak, replace them.	
When the label is printed out, the margin(space) is too large on both sides of the text.	See "Setting Margin" in this users guide and select [Half] or [Narrow] to have smaller margins for your label.	
The machine does not print, or the printed characters are not formed properly.	Check that the tape cassette has been inserted correctly.     If the tape cassette is empty, replace it.     Check the cassette cover is properly closed.	
The setting has cleared on its own.	The batteries may be weak. Replace them. When power is disconnected for more than three minutes, all text & formats in the display will be lost. Language and Unit settings will also be cleared.	
A blank horizontal line appears through the printed label.	There maybe some dust on the print head. Remove the tape cassette and use a dry cotton swab to gently wipe the print head with an up-and-down motion.	

### Problem The machine has "locked up" (i.e., nothing happens when a key is pressed, • Refer to "Resetting the P-touch" even though the machine eplace

The power turns off when you try to print.	<ul> <li>The batteries may be weak. Replace them.</li> <li>Check that the batteries are correctly inserted.</li> </ul>
The tape does not feed properly or the tape gets stuck inside the machine.	Check that the end of the tape feeds under the tape guides. The cutter lever is used while printing. Do not touch the cutter lever during printing.
All text and format	

settings need to be Press Clear and select [Text&Format]. cleared to create a new The LCD is set to an · Refer to "Initial Settings incorrect language.

## **BASIC USAGE**

### **Entering Text**

### ► Switching Upper Case/Lower Case

Upper case (A-a ON) Lower case (A-a OFF)

► Making Two Lines of Text To make two lines of text, do one of following:

a) Enter the text for the first line and then press for the second line b) Move the cursor to where the second line starts and press

Use either 0.35" (9mm) or 0.47" (12mm) wide tape for two line text.

LCD display Label image ABC+DEF\_ ABC DEF

● NOTE

Do not press after the second line; otherwise the "Line Limit!" error message will appear

### ► To Clear

▶ Preview

**▶** Printing

number key.

**▶** Setting Margin

[Full]/[Half]/[Narrow]

[Chain Print]

Enter text.

NOTE

Narrow

the margin to [Narrow].

\*Feed the tape before using the cutter.

By pressing (BS), the letters will be deleted one by one.

To delete all text and settings clear → ✓/ ► [Text&Format] ← To delete text only: Clear → ✓/ ► [Text Only] ←

**Printing Labels** 

► Feeding (Tape Feed)

You can preview the text before printing

Menu → ✓/ ► [Preview] ←

Menu → ◄/► [Feed] ←

selecting the number of copies.

right corner of the machine.

You can print up to 9 copies of each label

Menu → ✓/ ► [Margin] → [Full/Half/Narrow/Chain Print] ←

For leaving equal margins on both sides of the text.

For creating a label containing text in various styles.

**3.** Press ✓ / ► or enter number with number keys to

**4.** Press . Printing will start, and then the message "OK

**6.** Clear the text, enter the text for the next label, and then

7. When the message "OK to Feed?" appears after the last

**8.** After the tape is fed, press the cutter lever to cut off the

When [Half] or [Narrow] is set, the displayed label length is the

• To print more than 1 copy of a label with minimum margin, set

When [Chain Print] is set, feed the tape before using the cutter otherwise a part of the text may be cut off. Also, cut along the

Do not pull the tape since this may damage the tape cassette.

printed dots ( ) with scissors so the text is centered in the label.

Label image

ABC

ABC

2. Press [Print], then [Copies: ] appears.

select the number of copies.

**5.** Press (BS) to enter more text.

label is printed, press

LCD display

to Feed?" appears.

Only the text can be previewed, not the size, font or any

Print → [Copies: 1] < / | → / 1 - 9 → ←

• If you need only 1 copy of the label, press without

· The number of copies can also be specified by pressing a

· To prevent damage to the tape, do not touch the cutter lever

• To cut off the label, push in the tape cutter lever on the upper-

• Peel the printed label from the backing and apply the label.

while the message "Printing..." or "Feeding..." is displayed.

## **Saving Label Files**

You can save up to 9 labels and recall them for printing at a later date. A maximum of 80 characters can be saved per file, a maximum total of 720 characters for the total memory. You can also edit and overwrite the stored label





## Menu → ✓/▶ [File] → ✓/▶ [Open] →

If you try to store a label when there is already a label stored to that

number, a message "Overwrite?" will appear. Press ( ) to save

Accessories Guide'


## your new label. Press (BS) to cancel.

Accessories Tape Cassettes: See the included "Supplies and

**Cutter Unit:** TC-4 (replacement) If the cutter blade becomes dull after repetitive use and the tape cannot be cut cleanly, replace with a new cutter (stock no. TC-4). You may

### obtain this item from an authorized Brother reseller ► Replacing the Cutter Unit

1. Pull out the two sections of the cutter unit (green) in the direction of the arrows shown in the illustratio

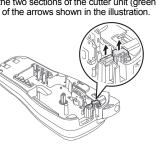

2. Install a new cutter unit. Push it in until it snaps into place. Do not touch the cutter blade directly with your fingers.

### Resetting the P-touch

NOTE

We, BROTHER INDUSTRIES, LTD Nagoya, 467-8561, Japan

requirements and other relevant provisions of Directives 2004/108/EC.

## ► Entering Accented Characters

 $A - Z \rightarrow \mathbb{A} \rightarrow \mathbb{A} / A / P \rightarrow A$ 

ŁĹĻĽ

To cancel the current operation, press (BS)

Menu → ✓/► [Label Length] ← →

✓ / ► [Auto/1.2"-12.0" (30-300 mm)] ←

After the label is printed, cut along the printed dots (:) with

scissors so that the label length matches the machine setting

If a specific label length has been selected, 
 also appears in

selected LCD language.

► Changing Label Length

Ķ

A Á Á Á Ä Æ Ã Ą Å Å Å a á á á æ ã ą å á ā

N NNNN R ARR n nnn r rrr

S ŠŠŞŞB T TTÞ S ŠŠŞŞB t ťţþ

Ó Ò Ô Ø Ö Ō Œ Ő Ó Ò Ô Ø Ö Ō Œ Ő

· The order of accented characters differs depending on the

ÇČĆ D ĎĐ C çčć d ďðđ

É É É É É É É É É É É É É É É É É É

GĞ İ İİTTLTI 9 İğ İ İTTTLT

ķ

The designed labels shown below are preset in the machine. Using these templates, you can create decorative labels easily by

**USING TEMPLATES** 

## Example: SRusty's food

**Auto Designs** 

```
→ [*Category*] → [*Category*] → →
[\star Input text \star] Rusty's Food \bullet \bigcirc \bigcirc [Print] \bullet
                        ₫"
   ★ 🥸 👑 ★★
                        Ø
                        *
                        4 & B. V
```

### If [Surprise!] is selected, a frame, style and pictographs are selected randomly.

### Depending on the format you have selected, the entire contents of your text may

- not be printed. For example, if you selected a fixed Label Length and the text is too long, the "Text Limit!" error message will appear. (Only for DECO MODE function) The template designs cannot be edited. Only the highlighted symbols in "Symbol Key" can be used in DECO MODE.

Frame Key Frame\*

-084B

● NOTE

Press Frame to select the frame design.

Frame > Select a frame

- To clear all text, press Clear, and "Clear?" appears. Press to clear. Press (BS) to cancel.
- When you access DECO MODE or Auto Designs, your most recently printed DECO MODE or Auto Designs text and label length will be recalled.
- Press (BS) to return to the previous step.

# Cable Label

displayed in the text input screen.

**DECO MODE** 

Example:  $A_BC_DE_FA_BC_D$ 

Menu → ✓ / ► [Deco mode] → →

BROTHER BROTHER

BROTHER BROTHER BROTHER

ROTHER BROTHER 
BROTHER BROTHER BROTHER BE

[Design X] (X:1-12) → [Input Text] ABCDEF → →

This function allows you to create unique labels by using built-in templates.

[Label Length]  $\rightarrow$  [Auto/1.2"-7.8"(30-200mm)]  $\rightarrow$  [Print]  $\rightarrow$ 

To exit DECO MODE or Auto Designs and return to the text input screen, pres-

The DECO MODE features are only available when using 0.47" (12mm) tape

The maximum label length is 7.8" (200mm) for the DECO MODE.

Press to return to the [Auto] setting for "Label Length" mode

to select [Cancel], and then press when [Print] is displayed.

When [Surprise!] is selected in the Auto Designs function, label length will not be

When [Auto] is selected for "Label Length", the label will automatically adjust to the

BROTHER BROTHER BROTHER

BROTHER BROTHER BROTH

BROTHER BROTH

BROTHER BROTH

B<sub>R</sub>O<sub>T</sub>H<sub>E</sub>R B<sub>R</sub>O<sub>T</sub>H<sub>E</sub>R E

This function allows you to create cable labels as below with 2 lines of text wrapping around



## With the Cable Label function, [Auto] is automatically selected for

## Text Kevs Size / Sity/e / Menu + 1

1 Press Size or Style or Menu + 1 to select the settings to enter the text.

## Size or Sty/e or Menu + 1 → ✓/ ► Select an item ←

Size		Largo	
	Size	Medium	
		Small	
	Style	Normal	4
	Sty/e	Bold	4
		Outline	Æ
		Shadow	Æ
		Italic	A
		I+Bold	_
		I+Outline	A

You can reset the P-touch labeler when you want to initialize the settings, or in the event the P-touch labeler is not working properly. 1 Turn off the P-touch labeler, hold down Menu and

R and then press (b) to turn the P-touch back on.

### Release Menu and R. The P-touch labeler turns on with the internal memory reset.

All text, settings and stored files are cleared.

## Declaration of Conformity

declare that this product is in compliance with the essential

The Declaration of Conformity (DoC) is on our Web site. Please go to <a href="http://support.brother.com">http://support.brother.com</a> -> choose region (eq. Furone) -> choose country -> choose your model -> choose "Manuals"-> choose Declaration of Conformity (\*Select Language when required).

cable. We recommend using Brother Flexible ID tape when wrapping.



## **USEFUL FUNCTION KEYS**

Frames cannot be printed on 0.13" (3.5mm) tape

4 7

8

6 \* \* 9 \* \* 9

•-\_\_\_

< −

# 2 Press / to select the settings.

	Size	Medium	A
		Small	A
	Style	Normal	А
	Sty/e	Bold	Α
		Outline	A
		Shadow	A
		Italic	A
		I+Bold	A
		I+Outline	A
		I+Shadow	A
		Vertical	4

## **Short Cut Keys**

Menu + 1

Label Length	Menu → 2
Margin	Menu → 3
File	Menu → 4
Cable	Menu → 5
Deco mode	Menu → 6
Preview	Menu → 7
Feed	Menu → 8
Unit	Menu → 9
Language	Menu -

Refer to the insertion sheet included with

Flexible ID tape about the recommended conditions for use.



Size	Large	$\overline{\mathbb{A}}$
Size	Medium	<u> </u>
	Small	A
Style	Normal	Α
Sîty/e	Bold	Α
	Outline	A
	Shadow	A
	Italic	А
	I+Bold	A
	I+Outline	A
	I+Shadow	A

Α

А

Width	Menu → 1
Label Length	Menu → 2
Margin	Menu → 3
File	Menu → 4
Cable	Menu → 5
Deco mode	Menu → 6
Preview	Menu → 7
Feed	Menu → 8
Unit	Menu → 9
Language	Menu →

Symbol Key 🐏

Press 🤼 to select various symbols. To enter Basic symbols (Basic) → (I) Choose a symbol →

the label length and [Full] for the margins

@ | - | & | # | % | ? | ! | + | - | × | ÷ | ± ( | ) | [ | ] | < | \$ | ¢ | € | £ | ¥ | ° | ♪ α β γ δ <sup>9</sup> |  $\frac{1}{+}$  |  $\sim$  | == | ⊣⊢ |  $\cup$  |  $\mu$  |  $\Omega$ 7 8 9 0 1 2 3 4 5 6 7 8 9 

Only the highlighted symbols can be used in DECO MODE. To enter Pictograph symbols

Pictograph) Select category Select category

→ 【 / ► Choose a symbol 【 】 The selected symbol is displayed as "A1" in the text input screen. For example, a car \( \epsilon \) is displayed as \( \overline{\ov

# 8 6 6 **6** 6 21 8 9 9 8 8 8 8 M H 6 R A A **39 6 8 ● 本 4 2** 

To print all pictographs:

NOTE

Press (BS) to return to the previous step.