size: 350*100mm

 
VisionTek

VTWC30 Webcam User Manual

This webcam is a product for real-time data transmission to PC via USB port. It has a high resolution and fast transmission rate, as well as being portable and in a stylish design. This webcam will enable you to join video conferences for work and let's you stream for play.

Product diagram

- ①Omni directional microphone ⑤USB Cable
- ②Manual focus HD 1080p lens ⑥User Manual
- ③Flexible Base / Clip④Tripod Screw Hole
- Privacy coverLogo customizableLED panel



Parameters And Features

- HD 1080p COMS color sensor
- · Interface: USB2.0 port
- · Image focus: 50cm to infinity
- Manual focus
- Privacy protection
- · Omni directional microphones
- Social Software Compatibility
- · Multi-purpose mounting clip
- Specification of tripod screw hole: 1/4" standard screw hole

System Requirements

- PC or laptop with USB port Pentium 200 or higher CPU.
- Operation system:

Windows XP/ VISTA/ Win7/ Win8/ Win10

Linux 2.6.24 and above/ Ubuntu

Mac OS 10.6 and above/ Android5.1 and above

- · Over 200MB available hard disk space.
- 32MB or higher memory
- Support Direct X VGA card

Install Your Webcam

1. Place Your Webcam

 
Place the webcam where you want it - on a computer display, desktop or a tripod.



Note: this product does not contain tripod. Please purchase if necessary.

For Placement on the Display:


Open the webcam clip, and follow the steps and methods show in the figure to place the webcam on top of the display, please make sure the clip is firmly mounted.



2. Connect the Webcam

Connect the camera to the computer via the USB interface.

Tip: When using a desktop, it is better to connect the webcam to the USB interface on the back of the computer to avoid extra cables being in view.

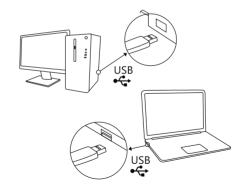

4. When installation is finished, you can start using.

Notice

- 1. Do not use in overly hot, cold, dusty or humid environment.
- Avoid touching the lens with hands, sharp or coarse material: use clean, soft cloth for cleaning.
- Avoid dropping. Dropping webcam may cause damage, including scratches, to the lens, or cause the webcam to malfunction.

Warranty

This product has a one year warranty for mechanical defects or issues.

Damage due to user error, misuse or dropping is not covered by warranty.

All specifications are subject to change without notice. Products may not be available in all markets. The VisionTek name and design are registered trademarks of VisionTek Products, LLC. All other registered and unregistered trademarks are the property of their respective owners.

FOR MORE INFORMATION CONTACT: 1-866-883-5411 | sales@visiontek.com