



*Boldly Creative*



*Expert Customer Service*





*Focus On Quality*



*Ships Same Day*

## Dell Shoulder Nut Dry Slide Rails - 4 Post and 2 Post Installation

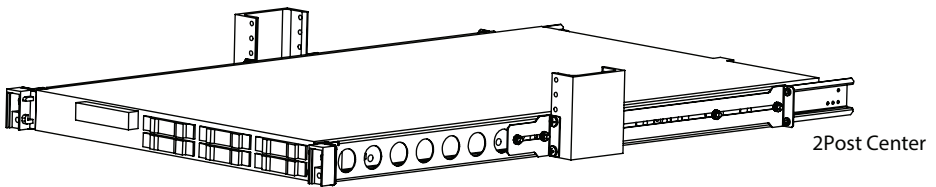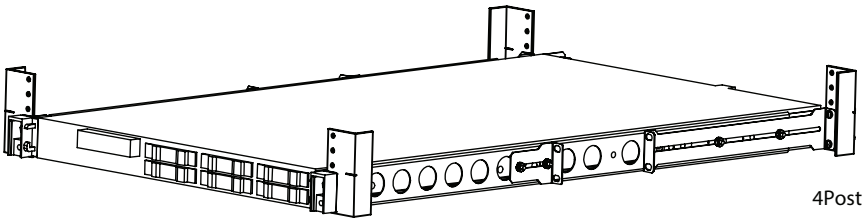

Installation Instructions

Kit P/N: 122-7775

# Kit Contents

## Components :

- (2) Outer Rail (Left & Right)
- (2) Inner Rail (Left & Right)
- (2) Shim (Left & Right)
- (2) Rear Bracket

## Mounting Hardware:

- (8) 08-32 Pan Head Screws
- (2) Retainer Plate (Left and Right)
- (2) Mounting Plate

## Rear Bracket Hardware:

- (4) 08-32 Flat Head Screw
- (4) 08-32 Kep Nut

## Rack Mounting Hardware:

- (8) 10-32 Pan Head Screw
- (8) 12-24 Pan Head Screw
- (8) 12-24 Cage Nut
- (8) 12-24 Square Nut


# Installation Instructions

**Step 1** First, detach shoulder nuts from server. Then, use the chart below to find the correct orientation of the inner rails and whether a shim is needed or not. The corresponding ID holes should be pointed upward and the top row of holes should be used.


| Server            | ID Holes | Shim |
|-------------------|----------|------|
| R610              | 1        | No   |
| R710              | 1        | No   |
| R715              | 3        | Yes  |
| R810              | 3        | Yes  |
| R815              | 3        | Yes  |
| Precision R7610   | 3        | Yes  |
| Precision R5500   | 3        | Yes  |
| PowerVault NX3000 | 1        | No   |
| PowerVault DX6000 | 1        | No   |

Attach the Inner Rail without a shim.

### Step 1a

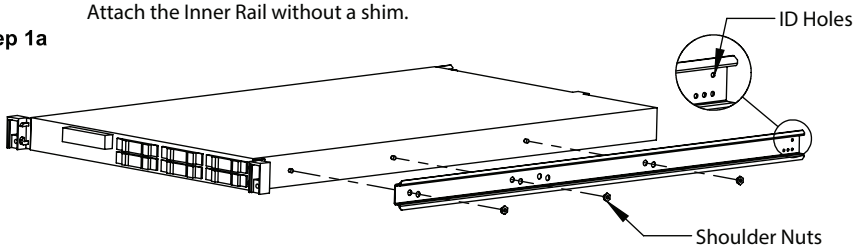


**Step 1b** Attach the Inner Rail with a shim.


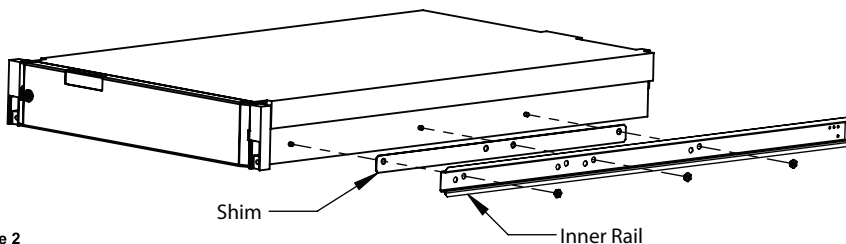


# Installation Instructions


- Step 2** Attach the Rear Brackets to the Outer Rail Assemblies, using included 8-32 Flat Head Screws and Kep Nuts. Ensure they are set to the required mounting depth.

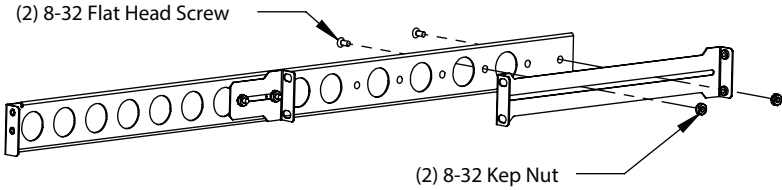

- Step 3** Attach the rail to the front and rear of the rack using the appropriate brackets and hardware for the desired rack configuration.

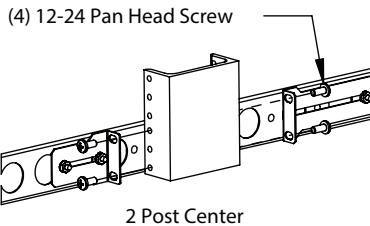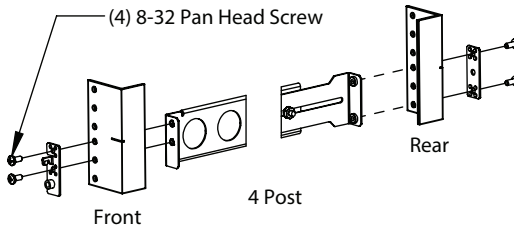


- Step 3a** For the 2 Post Center configuration, attach the Retainer Plate to the front of the outer rail as shown below using the supplied 8-32 Pan Head Screws. Repeat for the other side.

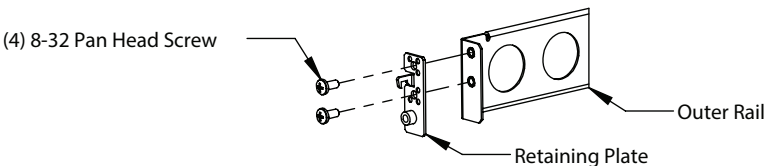

# Installation Instructions

---

Step 4 Install equipment into the rails and sliding all the way in. Tighten the (2) Pan Head Screws on the back of the the left slide rail. Slide the equipment out about 8inches and tighten the (2) Pan Head Screws on the front of the slide rail

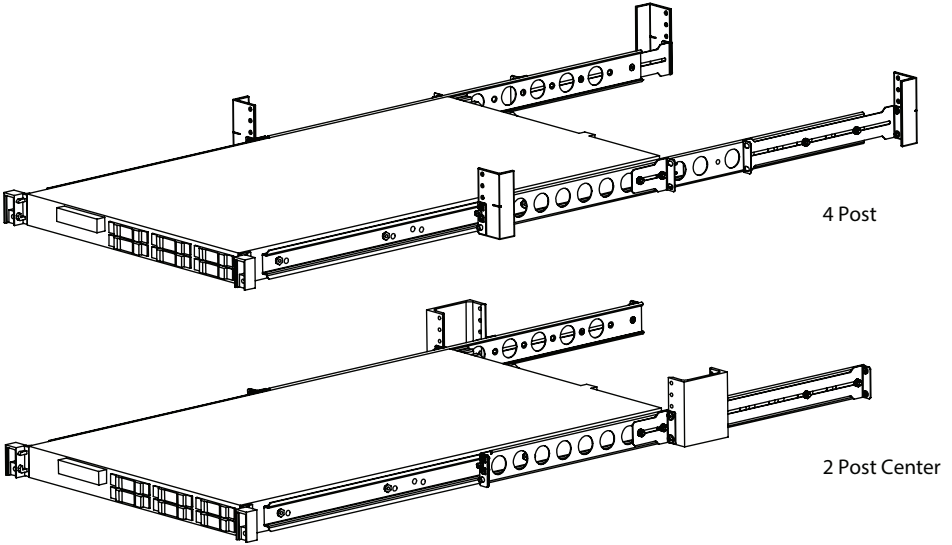

Note: When tightening the loose rails, support the bottom of the server to ensure proper rail adjustment

### Warranty Statement

Innovation First, Inc. warrants our products against defects in material and workmanship for a period of one (1) year from the date of purchase. Innovation First, Inc. liability shall be limited to repairing or replacing, at our option, any defective product.