


## 1U Vented Cantilever Shelf - 16 in. Depth - Capacity 44lb / 20kg - 2-Pack

### Product ID

CABSHELF116V2PK

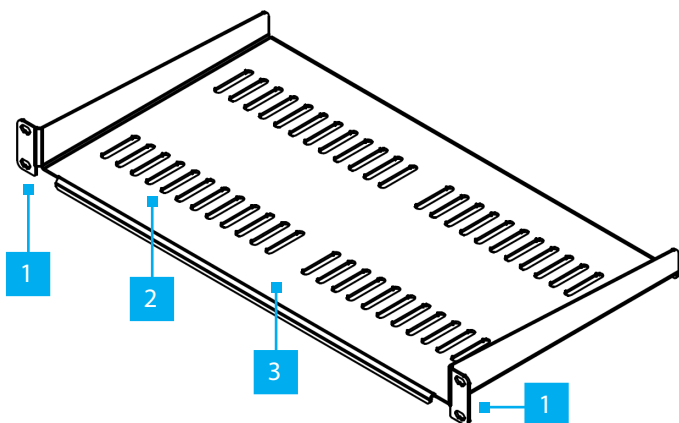

\*Product may vary from image

Component	Function
1 Front Mounting Brackets	• Used to fasten the <b>Shelf</b> to the <b>Mounting Posts</b> of a <b>Server Rack</b>
2 Ventilation Holes	• Promote airflow for the <b>Server Rack Equipment</b>
3 Shelf Surface	• Place <b>Server Rack Equipment</b>

### Package Contents

- 1U Rack Shelf x 2
- M6 Screws x 8
- M6 Cage Nuts x 8
- M6 Plastic Washers x 8
- Quick-Start Guide x 1

### Requirements

For the latest manuals, product information, technical specifications, and declarations of conformance, please visit: [www.StarTech.com/CABSHELF116V2PK](http://www.StarTech.com/CABSHELF116V2PK)

- Refer to the manufacturer of the Server Rack to determine the mounting hole type and size

- Phillips head screwdriver
- Cage nut tool (Optional)

### Warnings!

- Read the entire Quick-Start Guide and ensure the instructions are fully understood before using this product.
- Before adding equipment to this product, ensure this product has been properly mounted.
- Never operate this product if parts are missing or damaged.
- Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment is possible. This product can support the following weight: 44 lb (20 kg).

### Installation

1. Find a suitable location on the **Server Rack** to mount the **Shelf**. The **Shelf** requires **1U of Mounting Space**.
2. Install the **M6 Cage Nuts** (x 4) into the **Mounting Holes** (x 4) on the **Mounting Posts** of the **Server Rack**. If available, use a **Cage Nut Tool** or your preferred installation method to install the **Cage Nuts**.
 

*Note: Skip this step if the rack has M6 threaded holes. The M6 Screws can be installed without the M6 Cage Nuts.*

*Use the manufacturer-recommended Screws for the Server Rack if they differ from M6.*
3. Place the **Shelf** onto the **Server Rack**. Ensure the **Mounting Holes** on the **Front Posts** are **Aligned** with the **Mounting Holes** of the **Front Mounting Brackets**.
4. Insert the **M6 Screws** (x 4) through the **Plastic Washers, Front Mounting Brackets**, and into the **Mounting Posts** of the **Server Rack**. Tighten the **M6 Screws** (x 4) using a **Phillips Head Screwdriver**.

*Note: Ensure the Shelf is secure before placing Server Rack Equipment.*

## Regulatory Compliance

### Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

PHILLIPS® is a registered trademark of Phillips Screw Company in the United States or other countries.

### Warranty Information

This product is backed by a lifetime warranty.

For further information on product warranty terms and conditions, please refer to [www.startech.com/warranty](http://www.startech.com/warranty).

### Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.



**StarTech.com Ltd.**  
45 Artisans Crescent  
London, Ontario  
N5V 5E9  
Canada

**StarTech.com LLP**  
4490 South Hamilton  
Road  
Groveport, Ohio  
43125  
U.S.A.

**StarTech.com Ltd.**  
Unit B, Pinnacle 15  
Gowerton Road  
Brackmills,  
Northampton  
NN4 7BW  
United Kingdom

**StarTech.com Ltd.**  
Siriusdreef 17-27  
2132 WT Hoofddorp  
The Netherlands

FR: [startech.com/fr](http://startech.com/fr)  
DE: [startech.com/de](http://startech.com/de)  
ES: [startech.com/es](http://startech.com/es)  
NL: [startech.com/nl](http://startech.com/nl)  
IT: [startech.com/it](http://startech.com/it)  
JP: [startech.com/jp](http://startech.com/jp)