


## START

### 1 Remove protective film

---


If using the optional overlay, remove the packaging film from both sides. If not using, skip to step 3.

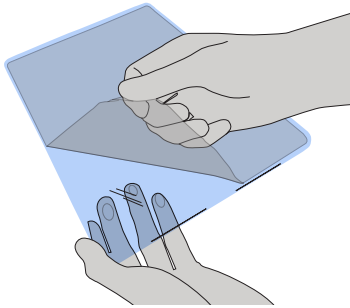

### 2 Align overlay with the bezel

---

Make sure home button is aligned, and that the small notch on the overlay sits on the right side (aligned with the corresponding notch on the bezel) Failure to align may cause bubbling.

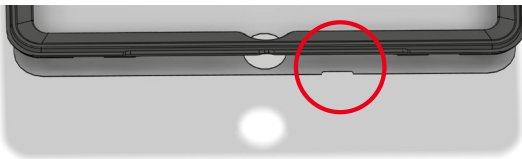

### 3 Install bezel

---

Slide the tab marked #1 in first near the power button. Then massage the bezel evenly into place around the the case.



### Optional Stylus Holder

---

Inserts with the logo facing frontwards. Insert into the 6 holes at angle, then rotate into place.

