
Installation Guide



Contents

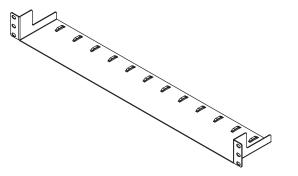

1U Cable Manager Tray


M6 Cage Nuts (4)



M6 Screws (4)

Installation

Attach and secure the 1U cable manager tray to the front or rear vertical rails of the rack enclosure using four of the included M6 cage nuts and screws.

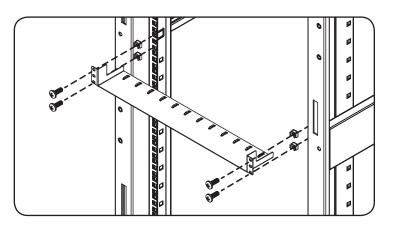

Tripp Lite has a policy of continuous improvement. Specifications are subject to change without notice.

PROTECT YOUR INVESTMENT!

Register your product for quicker service and ultimate peace of mind.

You could also win an ISOBAR6ULTRA surge protector—a \$50 value!

www.tripplite.com/warranty







1111 W. 35th Street, Chicago, IL 60609 USA • www.tripplite.com/support

Copyright $\ensuremath{\textcircled{C}}$ 2015 Tripp Lite. All rights reserved.