
INSTALLATION INSTRUCTIONS:

- Review the parts list and ensure you have all parts and tools required for assembly.
- If converting another UT-2000 series product, first remove the existing side lugs and rear fences.
- Loosely assemble the new kit to the base tray as shown in the exploded view.
- Adjust and tighten the new kit according to the configuration instructions in the UT-2000 Series owner's manual or go to www,havis.com for more information.

NOTE: Retain all unused hardware for possible future re-use.

UT-2007-KIT HARDWARE CONTENTS REPLACEMENT PARTS **ITEM HAVIS PART DESCRIPTION** QTY. NO. NUMBER BRACKET, FRONT HOLD DOWN UT-0168-SM 2 BRACKET, OFFSET HOLD DOWN LUG UT-0167-SM GSM33327 3 SCREW, BUTTON HEAD, PIN-IN-TORX, #10-32 X 0.5" CAP - 0.45" X 0.5", 0.04" THK HW-CA-0001/GSM41120 4 5 CAP, RECTANGULAR 1.5" X 0.5" X 1/16" HW-CA-0003/GSM41124 NUT, #10-32 X 0.375" SQUARE X 0.130" HW-MN-0004/GSM30110 6 WASHER, BELLEVILLE, SERRATED, #10 HW-SW-1262/GSM31089 8 INSTALLATION INSTRUCTIONS, UT-2007-KIT UT-2007-KIT INST TOOLS

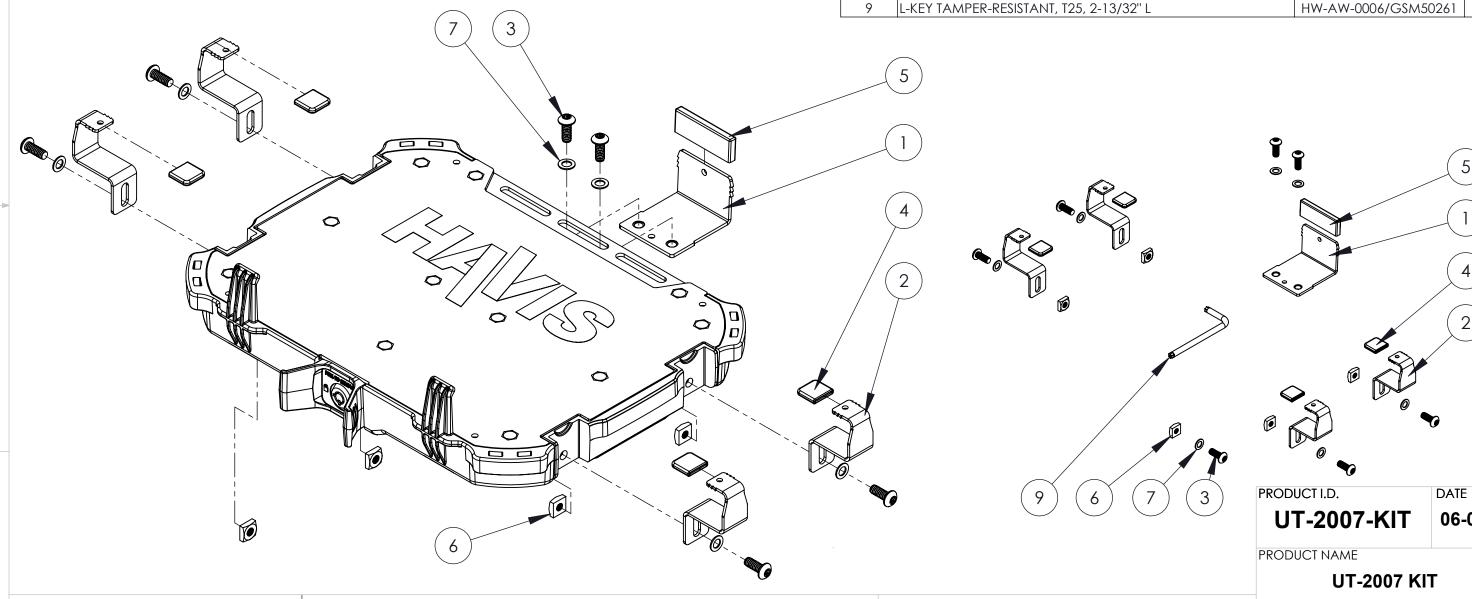

DRAWING NUMBER: UT-2007-KIT_INST_6-19

ALL HAVIS INC. PRODUCTS ARE DESIGNED WITH SAFETY OF USE AND INSTALLATION IN MIND. HOWEVER, PRODUCT DESCRIPTION DOCKING EQUIPMENT, TO INSURE THAT THE EQUIPMENT IS INSTALLED SO THAT IT WILL NOT INTERFERE WITH VEHICLE

UNIVERSAL TRAY, UT-2000 SERIES, IPAD PRO 12.9"

WWW.HAVIS.COM

WEIGHT: (LBS)

06-07-19

REV. DATE 6-19