


## Quick Installation Guide


### Cat6 Keystone Jack

### TC-K25C6/TC-K50C6


1. Strip approximately 30mm (1.2 in.) of jacket from the twisted pair cable.

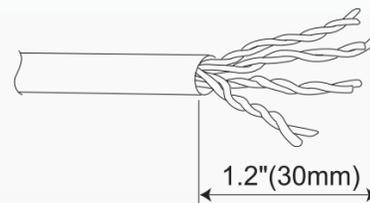


2. Insert the cable into the termination cap and fan out all four twisted pairs. Using the T568A or T568B color labeling, position each wire appropriately into the color labeled slots. Cut excess wires.

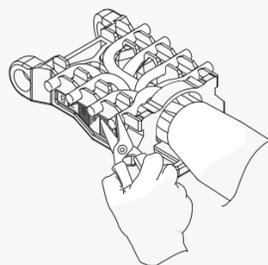


3. Clip the termination cap onto the keystone jack hinge.

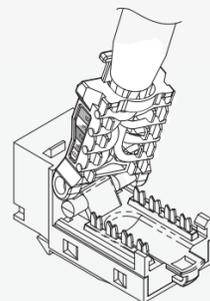

4. Press the termination cap down until flush with the keystone jack. Ensure each wire is firmly anchored in each slot.

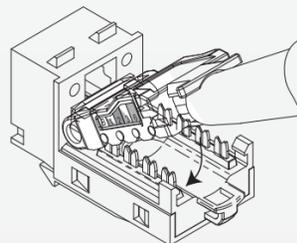


5. Feed the included cable tie through the cable fixture hole and tighten to secure the termination cap and keystone jack together.

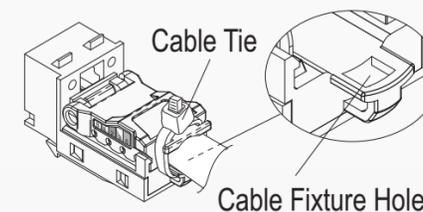


## Unloading the cable

1. Cut the cable tie.

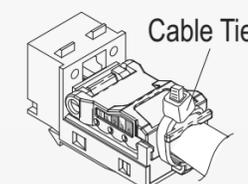

2. Using a flathead screwdriver, gently pry each side of the termination cap until released.

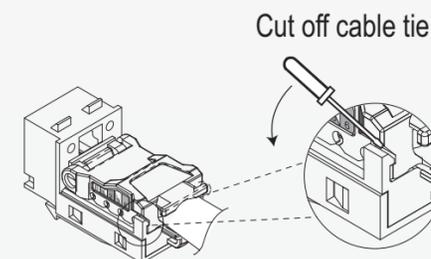

## T568B Pinout

- |                 |                |
|-----------------|----------------|
| 1. White Orange | 4. White Blue  |
| 2. Orange       | 5. Green       |
| 3. White Green  | 7. White Brown |
| 6. Blue         | 8. Brown       |