


# **Premium Locking Floor Stand Kiosk** w/ Universal Security Enclosure, Keyboard Tray and Storage Compartment (White)

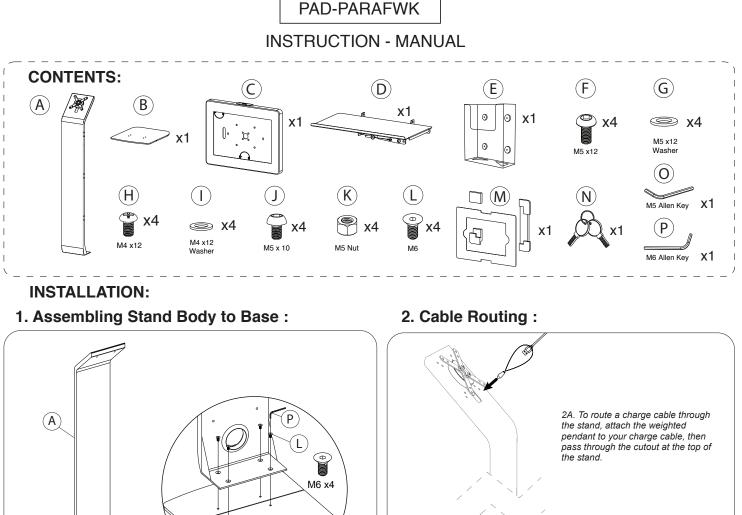


2B. When the cable reaches the bottom of the stand, pull through the hole at the stand back and remove the weighted pendant as shown. 1A. Allign the holes on the stand (A) with holes on the base (B) and turn in screws (L) with provided allen tool (P) until securely tightened. Shown above.


( **B** 

3. Assembling Enclosure to Stand :

### 4. Inserting Tablet into Enclosure :

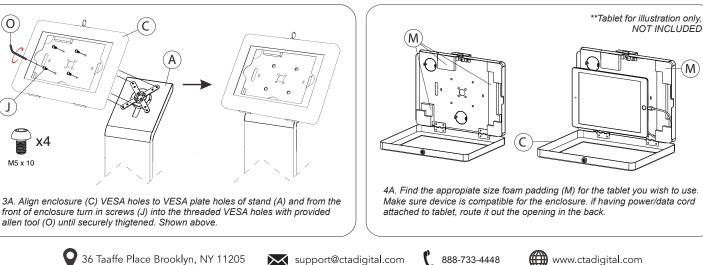


### 5. Optional - Placing Sheet Insert into Enclosure :

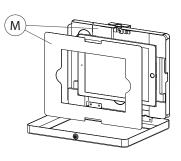


5A. Lay-in correct masking insert from bundle (M) as needed the correct fitted look for your device.

#### 6. Removing Back covers :

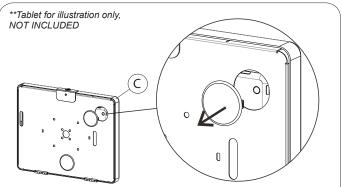


6A. When installing device into enclosure (C), identify where the camera is. Then simply remove and pop out the cover prior to mounting or setting up tablet to properly expose camera.

## 8. Setting up Keyboard Tray to Floor Stand :

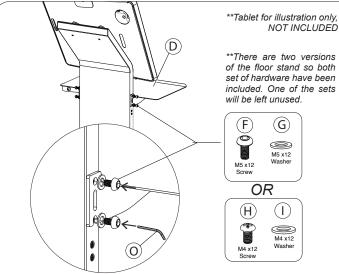

8A. Place keyboard tray (D) on the side holes of stand at desired height and turn in Screws and washers(F,G or H,I) with the provided allen tool (O) until securely tightened. Shown above.


#### 10. Mounting Magnetic Brochure Holder :

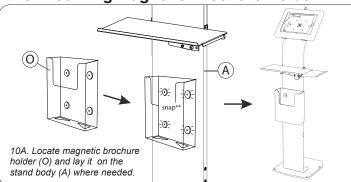


5B. Close and lock enclosure afterwards and you're set

### 7. Setting up Security :

 $(\mathbf{M})$ 

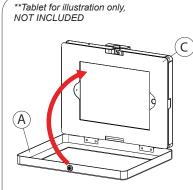

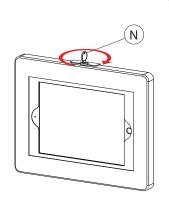


\*\*Tablet for illustration only, NOT INCLUDED

7A. Once the tablet device is set up, close the front lid of the enclosure (A).

7B. Insert the key (N) in the keyhole on top of enclosure, and turn clockwise to lock the enclosure in place.

### 9. Expanding or Stowing Tray Extension

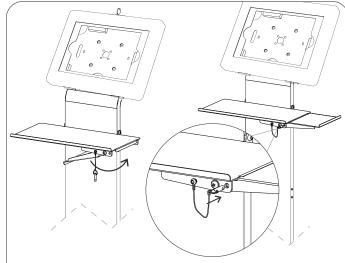

9A. If not extended, find the tray extension on the underneath of the main tray body. Firmly adjust and fold out tray extension. Insert metal rod component into hole as shown to securely lock extension piece in place. When stowing away, you need to remove rod first, then fold up by rotating around the joint.



888-733-4448