

MAG Series

LCD Monitor

MAG 275CQRXF (3CD5) MAG 325CQRXF (3DC8)

User Guide

Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	5
Monitor Overview	6
Connecting the Monitor to PC	8
OSD Setup	9
Navi Key	9
Hot Key	9
OSD Menus	10
G.I	10
Gaming	11
Professional	13
Image	14
Input Source	14
PIP/PBP	15
Navi Key	16
Setting	16
Specifications	18
Preset Display Modes	20
Troubleshooting	22
Safety Instructions	23
TÜV Rheinland Certification	25
Regulatory Notices	26

Revision

V1.0, 2023/09

Getting Started

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

Package Contents

Manitan	MAG 275CQRXF		
Monitor	MAG 325CQRXF		
Documentation	Quick Start Guide		
	Stand with Screw(s)		
	Stand Base with Screw(s)		
Accessories	Screw(s) for Wall Mount Bracket(s)		
	Power Cord		
	External Power Supply		
	Premium High Speed HDMI™ Cable (Optional)		
Cables	DisplayPort Cable (Optional)		
Capies	USB Upstream Cable (Optional)		
	(for USB Type-B Upstream Port)		




Important

- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

Installing the Monitor Stand

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- Make sure the stand assembly is properly installed before setting the monitor upright.

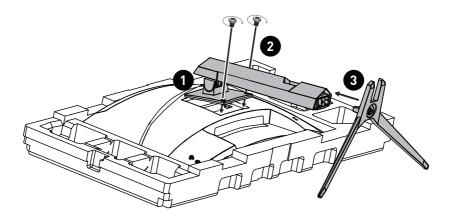

Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The groove for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any
 mechanical damages to the product including removal of the polarizing film may
 affect the warranty!



Adjusting the Monitor


This monitor is designed to maximize your viewing comfort with its adjustment capabilities.



Important


Avoid touching the display panel when adjusting the monitor.


MAG 275CQRXF

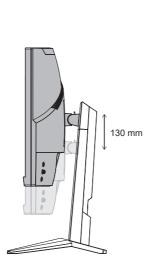




MAG 325CQRXF

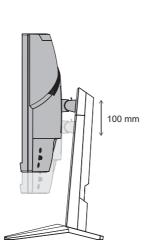

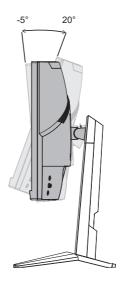


Monitor Overview

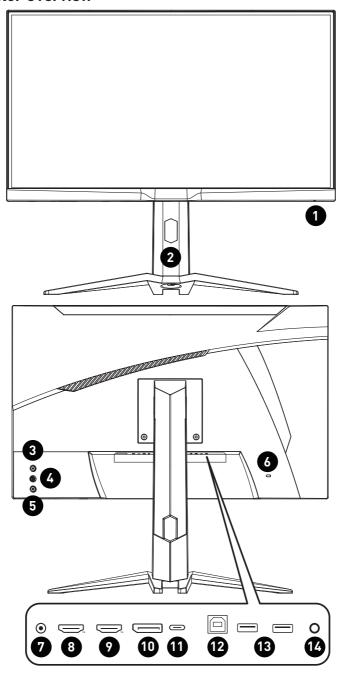

1	Power LED			
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.			
2	Cable Routing Hole			
3	Macro Key			
	To activate OSD Application.			
4	Navi Key			
5	Power Button			
6	Kensington Lock			
7	Power Jack			
8	HDMI™ Connector HDMI™ Connector			
	Supports HDMI™ CEC, 2560x1440@144Hz as specified in HDMI™ 2.0b.			
9	HDMI™ Connector H □ I III			
	Supports 2560x1440@144Hz as specified in HDMI TM 2.0b.			
10	DisplayPort			
W	Supports 2560x1440@240Hz as specified in DisplayPort 1.4a.			
M	USB Type-C Port			
	This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A (15W) power delivery.			
	1mportant			
	Your USB-C signal source and cable must support DisplayPort Alternate Mode to enable video output to the monitor.			
12	USB 2.0 Type-B Upstream Port			
	For USB Upstream Cable.			
	Important To Monitor			
	Check the package for USB Upstream Cable and connect it to the PC and			
	monitor. Once this cable is connected, the			
	USB Type-A Downstream Ports on the monitor will be ready for use.			
A				
B	USB 2.0 Type-A Port			
12	Headphone Jack			

Connecting the Monitor to PC

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- **3.** Assemble the external power supply & power cord. (Figure A)
- **4.** Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

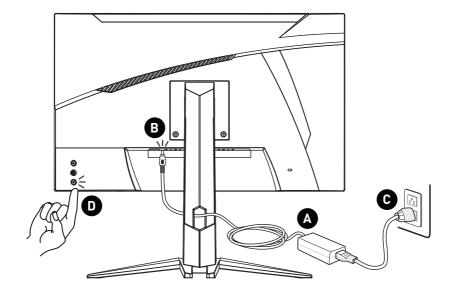

OSD Setup

This chapter provides you with essential information on OSD Setup.




Important

All information is subject to change without prior notice.

Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

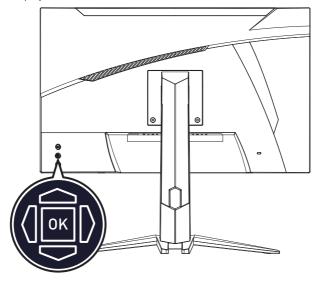

Up/ Down/ Left/ Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus


Press (OK):

- launching the On-Screen Display (OSD)
- · entering submenus
- · confirming a selection or setting

Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

OSD Menus

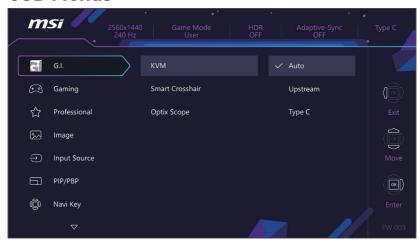



Important

The following settings will be grayed out when HDR signals are received:

- Night Vision
- MPRT Sync
- Low Blue Light
- HDCR
- Brightness

- Contrast
- Color Temperature
- Optix Scope
- PIP/PBP

G.I.

1st Level Menu	2nd Level Menu	Description
KVM	Auto	Auto allows the monitor to automatically switch
	Upstream	between USB input sources, such as keyboards, mice or other USB devices.
	Type C	Users can also designate Upstream port or USB Type-C as the only USB signal source.

Smart Crosshair	Icon	None	Through AI algorithm the visibility of in-gan	, this function enhances
			, ,	re crossitair.
	Color	White		
		Red		
		Auto		
	Position			
	Reset			
Optix Scope	Scope Size	Small		zoom in when Optix Scope
		Medium		adjust the details through "Scope Ratio" settings.
		Large	Smart Crosshair and	
	Scope	x1.5	 enabled at the same time. Activating Optix Scope will affect: 	
	Ratio	x2	Affected Function	Function Status
		х4	» MPRT Sync	
	OFF ON		» Adaptive-Sync	Set to OFF
			» PIP/PBP	
			» Screen Size 1:1	Set to Auto

Gaming

1st Level Menu	2nd/3rd Level Menu	Description
Game Mode	User	Use Up or Down Button to select and preview
	FPS	mode effects. • Press the OK Button to confirm and apply your
	Racing	mode type.
	RTS	
	RPG	
Night Vision	OFF	This function optimizes background brightness
	Normal	and is recommended for FPS games.
	Strong	
	Strongest	
	A.I.	

1st Level Menu	2nd/3rd Lev	vel Menu	Description	
Response Time	Normal		Setting to Fastest with	
	Fast		response time and help improve blurred images when playing very fast games.	
	Fastest			
MPRT Sync	OFF		MPRT is available w 85 Hz. Activating MPRT Syr	hen the refresh rate is over
	ON		Affected Function	Function Status
			» Brightness » Response Time » HDCR » PIP/PBP » Optix Scope » Screen Size 1:1	Unable to select Set to OFF Set to Auto
Refresh Rate	Location	Left Ten		
Refresh Rate	Location	Left Top		le in OSD Menu. Press the n and apply your Refresh
		Right Top	Rate Location.	
		Left Bottom	 This monitor follows System's preset Scr 	and works at the Operating een Refresh Rate.
		Right Bottom		
	055	Customize	-	
	0FF		_	
A1 01 1	ON	L 6.7	A6	
Alarm Clock	Location	Left Top	After setting the tim activate the timer.	e, press the OK Button to
		Right Top		ally restore their preset
		Left Bottom	Alarm Clock after ar reconnection.	ny AC power loss and
		Right Bottom	_	
	055	Customize	-	
	OFF	T	-	
	15:00	00:01 ~ 99:59		
	30:00			
	45:00			
	60:00			
Adaptive-Sync	OFF		Adaptive-Sync preve	ŭ
	ON		Activating Adaptive-	
			» PIP/PBP	Function Status
			» Optix Scope	Set to OFF
			» Screen Size 1:1	Set to Auto

Professional

1st Level Menu	2nd Level Menu	Description	
Pro Mode	Eco User Anti-Blue Movie Office sRGB	effects.	on to select and preview mode to confirm and apply your mode
Low Blue Light	OFF ON	When enabled, Low E temperature to a mor	t to Anti-Blue, it is mandatory to
HDCR	OFF ON	HDCR enhances image contrast of images. Activating HDCR will Affected Function Brightness MPRT Sync	ge quality by increasing the affect: Function Status Unable to select Set to OFF
MPRT Sync	OFF	MPRT is available wh Activating MPRT Synd Affected Function » Brightness » Response Time » HDCR » PIP/PBP » Optix Scope » Screen Size 1:1	en the refresh rate is over 85 Hz. c will affect: Function Status Unable to select Set to OFF Set to Auto
Image Enhancement	OFF Weak Medium Strong Strongest	Image Enhancement their acutance.	enhances image edges to improve

Image

1st Level Menu	2nd/3rd Level Menu		Description	
Brightness	0-100		Properly adjust Brightness according to the surrounding lighting.	
Contrast	0-100		Properly adjust Con	trast to relax your eyes.
Sharpness	0-5		Sharpness improves images.	s clarity and details of
Color Temperature	Cool		Use Up or Down But preview mode effect	
	Normal			
	Warm R (0-100) G (0-100)		Press the OK Button to confirm and apply your mode type. Users can adjust Color Temperature in Customization mode.	
		B (0-100)]	
Screen Size	Auto		Users can adjust Screen Size in any mode, any resolution and any screen refresh rate. Activating Screen Size 1:1 will affect:	
	4:3			
	16:9 16:10 1:1			
			Affected Function	Function Status
			» MPRT Sync » Adaptive-Sync » PIP/PBP » Optix Scope	Set to OFF

Input Source

	Users can adjust Input Source in any mode.
OFF	Users can use the Navi Key to select Input Source at
ON	 White "Auto Scan" is set to "OFF" with the monitor at power saving mode; White "No Signal" message box is shown on the

PIP/PBP

1st Level Menu	2nd/3rd Level Menu		Description	
OFF			PIP (Picture in Picture)	
PIP	Source	HDMI™1	HDMI™1 simultaneously display multiple video s on one screen. One program is display	
		HDMI™2	full screen at the sar	ne time as one or more
		DP		displayed in inset windows.
		Type C	 PBP (Picture by Picture) is a similar feature that displays two input sources side-by-size 	
	PIP Size	Small	the screen. • Display Switch allows	s users to switch between
		Medium	primary and seconda	
		Large	If there is only one si Coultable and Audia Coul	
	Location	Left Top		itch will be grayed out. ratio of window division by
		Right Top	switching mode 1/2/	3.
		Left Bottom	Activating PIP/PBP w	vill affect:
		Right Bottom	Affected Function	Function Status
		Customize	» Response Time » Adaptive-Sync	Unable to select
	Display Swi	tch	» Optix Scope	Set to OFF
	Audio Switc	h	» HDMI™ CEC	Set to OFF & Unable to
PBP	Mode 1		» MPRT Sync	select
	Mode 2		» PIP: Screen Size	Set to Auto & Unable
	Source 1	HDMI™1	1:1/ 16:10 » PBP: Screen Size	to select
		HDMI™2	4:3/ 16:9/ 16:10/ 1:1	
		DP]	
		Type C		
	Source 2	HDMI™1]	
		HDMI™2]	
		DP	1	
		Type C	1	
	Display Switch			
	Audio Switc	h]	

Navi Key

1st Level Menu	2nd Level Menu	Description
Up	OFF	All Navi Key items can be adjusted via OSD Menus.
Down	Brightness	
Left	Game Mode	
Right	Smart Crosshair	
	Alarm Clock	
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	Night Vision	
	Optix Scope	
	KVM	

Setting

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	Users have to press the OK Button to confirm and apply
	English	the Language setting. • Language is an independent setting. Users' own
	Français	language setting will override the factory. When users
	Deutsch	set Reset to Yes, Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	
Transparency	0~5	Users can adjust Transparency in any mode.
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.
RGB LED	OFF	Users can adjust RGB LED to ON or OFF.
	ON	

1st Level Menu	2nd Level Menu	Description			
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.			
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.			
Info. On Screen	0FF	The information of the monitor status will be shown on			
	ON	the right side of the screen.			
HDMI™ CEC	OFF	HDMI™ CEC (Consumer Electronics Control) supports			
	ON	Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.			
		If HDMI™ CEC is set to ON:			
		The monitor will automatically power on when the CEC device is turned on. The CEC device will enter power saving mode when the monitor is turned off.			
		 When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Game Mode and Pro Mode will be automatically set to default modes and can be adjusted to users' preferred modes later. 			
Type C PD Charge	OFF	Type C PD Charge enables users to charge their			
	ON	devices through a USB Type-C connector, which can deliver up to 15W (5V/3A).			
Reset	YES	Users can Reset and restore settings to original OSD			
	NO NO	Default in any mode.			

Specifications

Monitor	MAG 275CQRXF	MAG 325CQRXF			
Size	27 inch 31.5 inch				
Curvature	1000R				
Panel Type	Rapid VA				
Resolution	2560 x 1440 (WQHD)				
Aspect Ratio	16:9				
Brightness	300 nits (typ.)	400 nits (typ.)			
Contrast Ratio	2500:1	4000:1			
Refresh Rate	240Hz				
Document Time	1ms (GTG)				
Response Time	1ms (MPRT)				
	• HDMI™ Connector x2				
	DisplayPort x1				
1/0	USB Type-C Port x1				
1/0	• USB 2.0 Type-A Port x2				
	• USB 2.0 Type-B Upstream Port x1				
	Headphone Jack x1				
View Angles	178°(H), 178°(V)				
DCI-P3*/ sRGB	92% / 116%	91% / 115%			
Surface Treatment	Anti-glare				
Display Colors	1.07B (8 bits + FRC)				
Monitor Power Options	20V === 4.5A	20V === 6A			
External Power Supply	Model: ADPC2090	Model: ADPC20120			
Power Input	100~240Vac, 50~60Hz, 1.3A	100~240Vac, 50~60Hz, 1.5A			
Power Output	20V === 4.5A	20V ==== 6A			
Adjustment (Height)	0 ~ 130mm	0 ~ 100mm			
Adjustment (Tilt)	-5° ~ 20°				
Kensington Lock	Yes				
	• Plate Type: 100 x 100 mm				
	• Screw Type: M4 x 10 mm				
VESA Mounting	• Thread Diameter: 4 mm				
	• Thread Pitch: 0.7 mm				
	Thread Length: 10 mm				

Monitor		MAG 275CQRXF	MAG 325CQRXF			
Dimension (W x H x D)		607 x 427 x 267 mm	701 x 480 x 270 mm			
Weight	Net	6.2 kg	7.8 kg			
weight	Gross	9.4 kg	10.7 kg			
		• Temperature: 0°C to 40°C				
	Operating	Humidity: 20% to 90%, non-condensing				
Environment		• Altitude: 0 ~ 5000m				
	C1	• Temperature: -20°C to 60°C				
Storage		Humidity: 10% to 90%, non-condensing				

^{*} Based on CIE1976 test standards.

Preset Display Modes



All information is subject to change without prior notice.

Standard	Resolution		Standard Mode		
Stallualu			HDMI™	DP	USB-C
Full HD	1920x1080	@60Hz	V	٧	V
QHD	2560x1440	@60Hz	V	٧	V
		@120Hz	V	٧	V
	@144Hz		V	٧	V
				V	V
		@180Hz		V	V
		@240Hz		V	V
Video Timing Resolution	720P		V	V	V
	1080P @60Hz 1080P @120Hz 2160P @60Hz HDMI™ VRR Function		V	٧	V
			V	٧	V
			٧		
			V		

Standard	Resolution		PIP Mode (Not Support HDR)		
Statiualu			HDMI™	DP	USB-C
Full HD	1920x1080	@60Hz	٧	V	V
QHD	2560x1440	@60Hz	٧	٧	٧
Video Timing Resolution	720P		٧	٧	V
	1080P @60Hz		٧	٧	٧
	2160P @30Hz		٧	٧	٧
	2160P @50Hz		٧	٧	٧
	2160P @60Hz		٧	٧	٧

Standard	Resolution		PBP Mode 1 (Not Support HDR)		
Stallualu			HDMI™	DP	USB-C
Video Timing Resolution	720P		V	V	V
Used for PBP	640x1440 @60Hz		٧	٧	٧
	1920x1440 @60Hz		V	V	٧

Standard	Resolution		PBP Mode 2 (Not Support HDR)		
Standard			HDMI™	DP	USB-C
Video Timing Resolution	720P		٧	٧	٧
Used for PBP Full Screen	1280x1440	@60Hz	V	V	V

Standard	Resolution		Screen Size 16:10 (Not Support HDR)		
			HDMI™	DP	USB-C
QHD+	2560x1600	@60Hz	٧	٧	٧
	2560x1600	@120Hz	٧	٧	٧
	2560x1600	@144Hz		٧	V
	2560x1600	@165Hz		٧	V
	2560x1600	@180Hz		٧	V

Troubleshooting

The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

The screen image is not properly sized or centered.

 Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V. 20A [maximum].
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

European Union:



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

RSMI:



廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
 - The power cord or plug is damaged.
 - Liquid has penetrated into the device.
 - The device has been exposed to moisture.
 - The device does not work well or you can not get it working according to the User Guide
 - The device has dropped and damaged.
 - The device has obvious sign of breakage.

TÜV Rheinland Certification

TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜVRheinland
 CERTIFIED

 Flicker Free

 www.tuv.com
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

Regulatory Notices

CE Conformity

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility [2014/30/EU], Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed hellow:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA

www.msi.com

WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.

Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

RoHS Statement

Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, \mathbb{N}^2 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- · Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

Environmental Policy

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

Warning!

Overuse of screens is likely to affect eyesight.

Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.



The terms HDMI™, HDMI™ High-Definition Multimedia Interface, HDMI™ Trade dress and the HDMI™ Logos are trademarks or registered trademarks of HDMI™ Licensing Administrator, Inc.

Technical Support

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.