

# OWNER'S MANUAL LG Digital Signage (MONITOR SIGNAGE)

Please read the user manual before using this product to ensure safe and convenient use.

32ML5K

# TABLE OF CONTENTS

### 

## GETTING READY ......5

-	Connecting the IR Sensors	5
-	Mounting and Removing the LG Logo	
	Bracket	6

## **CHECKING BEFORE**

INSTALLATION	/
- Installation Orientation	7
- Installation Location	8
- Wall Mount Holder	9

## PRECAUTIONS FOR USE...... 10

-	Dust	.10
-	Afterimage	.10

### **PRODUCT SPECIFICATIONS..... 12**

LICENCE 1	5
-----------	---

**WARNING** - This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

# BASIC

## 

- The accessories provided with your product may vary depending on the model or region.
- Product specifications or contents in this manual may be changed without prior notice due to upgrade of product functions.
- SuperSign Software & Manual
  - Visit http://partner.lge.com to download the latest SuperSign software and manual.
- For POE++ application, Cat5e or higher LAN cables must be used, and Cat6 and 23 AWG or higher cables are
  recommended.
- To meet the EMI standard, for LAN cables exposed to the outside of a wall, a cable of 2 m (6.5 feet) or less in length and FTP or STP grade must be used.
- When purchasing PSE equipment, it is necessary to purchase Class 6 (60 W) or higher, and for more stable performance, Class 7 (75 W) or higher is recommended. The length of the LAN cable must be 100 m (328 feet) or less. The longer the cable, the greater the power loss, so using the shortest possible cable is recommended.

# **Checking the Accessories**












Depending on country

## Learning the Buttons

The illustrations may differ depending on the model.

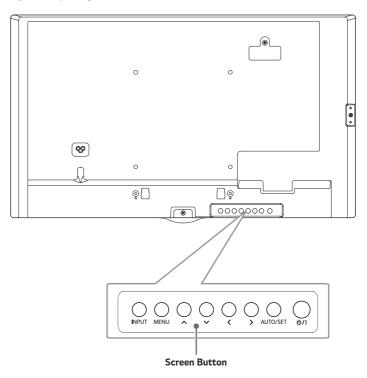

- INPUT : Changes the input signal.
- MENU: Opens the main menu or saves the input selection and exits the menu.
- **A C** : Adjusts up and down.
- **< >**: Moves left or right.
- AUTO/SET : Shows the signal and mode information currently set and allows the user to select a menu.
- ・ 也/I : Turns the power on and off.


# **GETTING READY**

## **Connecting the IR Sensors**


Connecting the cable to the product allows it to receive signals from the remote control. Rotate the IR sensor according to horizontal or vertical use.

- The illustrations may differ depending on the model.

#### Default Mount - Horizontal Use

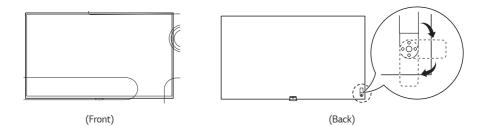

#### Vertical Use

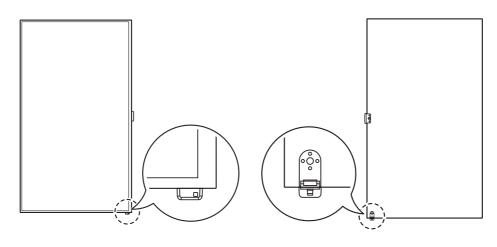

(Front)


(Back)

# Mounting and Removing the LG Logo Bracket

- Applies only to some models.
- The illustrations may differ depending on the model.


#### Removing the LG Logo Bracket

Place a clean cloth on the floor, and remove one screw from the LG logo bracket on the lower back of the monitor with a screwdriver.

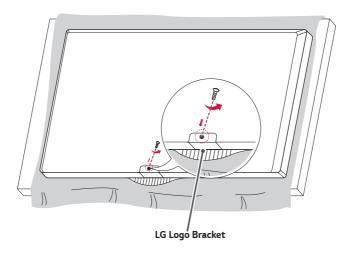

#### Mounting the LG Logo Bracket on the Right

Screw the LG logo bracket into the hole on the right.

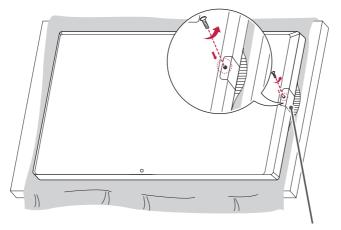

# **CHECKING BEFORE INSTALLATION**

We are not responsible for product damage caused by failure to follow the guide.

# **Installation Orientation**

#### Using Vertically


When installing vertically, rotate the monitor 90 degrees anti-clockwise while facing the front of the screen.



Tilt Angle



#### **Ceiling, Floor Orientation**

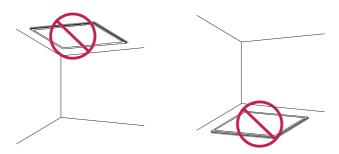


# ENGLISH


# **Installation Location**

We are not responsible for product damage caused by failure to follow the guide.

#### Indoor


#### Installing on a Wall

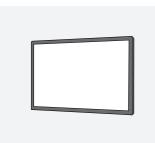

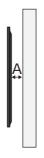

- A: 40 mm (1.5 inches)or more
- The warranty will not cover any damage caused by using the product in direct sunlight on the front panel.

Installing on a Recessed Wall

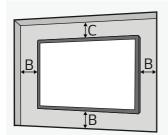



#### Outdoor Enclosed




A: 40 mm (1.5 inches) or more

- B: 50 mm (1.9 inches) or more
- C: 70 mm (2.7 inches) or more
- The warranty will not cover any damage caused by using the product in direct sunlight on the front panel.



## Wall Mount Holder

To install the monitor on a wall, attach a wall mount holder (optional) to the back of the monitor. Take caution, and ensure that the wall mount holder (optional) is securely fixed to the monitor and to the wall. The VESA dimensions of the wall mount by model are as follows.

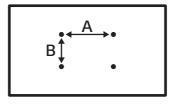

Model	VESA Dimensions (A x B) (mm)	Standard Dimensions	Length (Maximum) (mm)	Quantity
	200 x 200	M6	21.3	4
32ML5K	VESA Dimensions (A x B) (inches)	Standard Dimensions	Length (Maximum) (inches)	Quantity
	7.8 x 7.8	M6	0.8	4

# 

- Disconnect the power cord first, and then move or install the monitor. Otherwise, it may result in electric shock.
- If the monitor is installed on a ceiling or inclined wall, it may fall and result in injury.
- Damage to the monitor by tightening the screws too tightly may void your warranty.
- Use screws and wall mount plates conforming to VESA standards. Breakage or personal injury due to use or misuse
  of inappropriate components is not covered by the warranty of this product.

- Using screws longer than the indicated depth may damage the inside of the product. Be sure to use the proper length.
- · For more information on installation, please refer to the user manual for the wall mount.

# 10

# PRECAUTIONS FOR USE


# Dust


The warranty will not cover any damage caused by using the product in an excessively dusty environment.

# Afterimage

- After-image appears when the product is turned off.
  - Pixels may be damaged rapidly if a still image is displayed on the screen for a long period of time. Use the screensaver function.
  - Switching from a screen with high differences in luminance (black and white or grey) to a darker screen may cause an afterimage. This is normal due to the display characteristics of this product.
- When the LCD screen is in a still pattern for extended periods of use, a slight voltage difference may occur between the electrodes that operate the liquid crystal (LC). The voltage difference between the electrodes increases over time and tends to keep the liquid crystal aligned in one direction. At this time, the previous image remains, which is called an afterimage.
- Afterimages do not occur when continuously changing images are used but take place when a certain screen is fixed for a long time. The following are operational recommendations for reducing the occurrence of afterimages when using a fixed screen. The maximum recommended time for switching the screen is 12 hours. Shorter cycles are better for preventing afterimages.

- 1 Change the background color and text color at equal intervals.
- Afterimages occur less when the colors to be changed are complementary to one another.

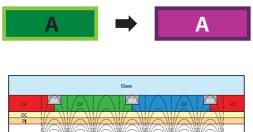

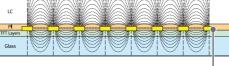

ITO or MoTi Pixel Layer

- 2 Switch the screen at equal time intervals.
- Take caution, and ensure that text or images from before the screen change are not left in the same location after the screen change.



# **PRODUCT SPECIFICATIONS**

Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.

Input/Output Ports	HDMI1, HDMI2, IR & LIGHT SENSOR, AUDIO OUT, LAN/PoE++ IN, RS-232 IN/OUT, USB 2.0 IN		
Resolution	Recommended Resolution Max Resolution	1920 x 1080 @ 60 Hz (HDMI1, HDMI2)	
Power Voltage	120 V~ 50/60 Hz 0.7 A or POE++ : 41.1-57.0 V 1.2 A		
Environmental Conditions	Operating Temperature Operating Humidity Storage Temperature Storage Humidity	0 °C to 40 °C (32 °F to 104 °F) 10 % to 80 % (Condition for preventing condensation) -20 °C to 60°C (-4 °F to 140 °F) 5 % to 85 % (Condition for preventing condensation) * Product box packaging storage conditions	
Audio	Input Sensitivity	0.7 Vrms	
Power Consumption	On Mode Sleep Mode / Standby Mode (AC standard)	55 W (Typ.) ≤ 1.0 W	

Model Name	Size (Width x Height x Depth) (mm)	Weight (kg)
	729.4 x 428.9 x 55.5	5.7
32ML5K	Size (Width x Height x Thickness) (inches)	Weight (lbs)
	28.7 x 16.8 x 2.1	12.5

#### HDMI (PC) Support Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Note
800 x 600	37.879	60.317	
1024 x 768	48.363	60	
1280 x 720	44.772	59.855	
1280 x 1024	63.981	60.02	
1680 x 1050	65.29	59.954	
1920 x 1080	67.5	60	

#### HDMI (DTV) Support Mode

Resolution	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Note
480/60p	31.5	60	
576/50p	31.25	50	
720/50p	37.5	50	
720/60p	45	60	
1080/50i	28.1	50	
1080/60i	33.75	60	
1080/50p	56.25	50	
1080/60p	67.432	59.94	
1080/60p	67.5	60	

Wireless module (LGSBWAC92) Specifications		
Wireless LAN (IEEE 802.11a/b/g/n/ac)		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	18	
5150 to 5725	18	
5725 to 5850	18	
Bluetooth		
Frequency range (MHz)	Output power (Max.) (dBm)	
2400 to 2483.5	8	
• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.		

• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm (7.8 inches) between the device and the body.

• FCC ID: BEJLGSBWAC92 / IC: 2703H-LGSBWAC92

ENGLISH

# LICENCE

Supported licenses may differ by model. For more information of the licenses, visit www.lg.com.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Manufactured under license from Dolby Laboratories. Dolby, Dolby Vision, Dolby Vision IQ, Dolby Audio, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by LG Electronics Inc. is under license. Other trademarks and trade names are those of their respective owners.



#### Supplier's Declaration of Conformity

Trade Name	LG
Responsible Party	LG Electronics USA, Inc.
Address	111 Sylvan Avenue, North Building,
	Englewood Cliffs, NJ 07632
E-mail	lg.environmental@lge.com

ENERGY STAR

This product qualifies for ENERGY STAR®.

Changing the factory default configuration and settings or enabling certain optional features and functionalities may increase energy consumption beyond the limits required for ENERGY STAR® certification.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR<sup>®</sup> program.

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

#### MODEL

SERIAL NO.

Temporary noise is normal when powering ON or OFF this device.